

Self Closing System

INSTRUCTIONS TO REPLACE THE SPRING CARTRIDGE

1. Remove the bottom nut of the self closing system from the hinge bracket.
2. Remove the screws from the top hinge bracket.
Secure the door to prevent from falling.
3. Remove the top hinge bracket.
4. Raise the door and take it out of the cabinet.
5. Remove the self closing spring cartridge

REPLACING THE SPRING CARTRIDGE

6. Be sure that the plastic insert in the door frame is visible from the bottom pivot hole.
7. Replace with the spring cartridge provided.
8. Be sure to align the hook of the spring assembly with the slot in the plastic insert that is inside of the door frame.
9. Position the door in its location.
10. Secure the bottom hinge bracket with the screws
11. Adjust the tension of the spring as needed. (Follow Instructions Below).

PLASTIC INSERT



FIG.1

SCREWS

TOP HINGE BRACKET

DOOR

SPRING

BOTTOM HINGE BRACKET



FIG.2